



維盟科技有限公司
Evowave Technology Co., Ltd.

規格書 / Specification

Description:	Linear Vibration Motor
Part No.:	LK0612WXX
Date:	2017/11/13

地址:新北市汐止區康寧街 169 巷 27 號 10 樓之 1

Address: 10F-1, No.27, Lane 169, Kang-ning St., Hsi Chih
221, Taipei, Taiwan.

Tel: 886-2-2692-6058

Fax: 886-2-2692-6659

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 1/10

Mechanical Eng.	Lin Fengjun	Check/Apr.	Yu Haijiang
Package Eng.	Huang Haojing		
Application Eng.	Yan Xinjiang	Check/Apr.	Yu Haijiang

Date	Issue	Detail changes
08/11/2017	X1	Document created

Table of contents

1. Scope
2. Environmental Requirement
3. Description And Application
4. Standard Operating Condition
5. Characteristics
6. Performance
7. Standard Test Condition
8. Recommended Stimulus
9. Reliability Tests
10. Caution For Use
11. Mechanical Drawing
12. Permitted force to vibrator
13. Package

Keywords: Linear Vibrator, 15Ohms, 6x12x2.8mm, Connector Contact, GP Compliant

NO.	Issue: X1	Revision Date: 08/11/2017	Page: 2/10
-----	-----------	---------------------------	------------

1. Scope

This document contains required environmental, electrical, vibratory, mechanical, package and reliability test requirements.

2. Environmental Requirement

The vibration including all components and solder joints must be free from lead (Pb) and other banned or restricted substances according to customer's requirements.

3. Description And Application

This is a FPC contact vibrator which is applied with an AC signal (sine wave or square wave) around the resonant frequency. This device is recommended to be used for haptic feedback device, ex. Mobile phone.

4. Standard Operation Condition.

- | | |
|---------------------------------|---|
| 4.1 Rated voltage | 2.0Vrms (square wave or sine wave) |
| 4.2 Operating voltage range | 0~2.1Vrms |
| 4.3 Operating temperature range | -20°C to +70°C Ordinary humidity (No condensation of moisture) |
| 4.4 Storage temperature range | 0°C to +40°C Ordinary humidity at normal atmospheric pressure (No condensation of moisture) |

5. Characteristics

- | | |
|---------------------------|---|
| 5.1 Coil resistance | 15±15%Ω |
| 5.2 Rated current | Max 135mA @ rated voltage |
| 5.3 Insulation resistance | Min 10MΩ @ 100VDC Between terminal and housing. |
| 5.4 Motor Weight | ~1.35g (Connectors are not included) |


6. Performance

- | | |
|------------------|---|
| 6.1 Acceleration | Min 0.7 Grms at F0 @ 100g fixture in the middle
@ 2Vrms sine wave (Refer to standard test condition) |
|------------------|---|

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO.	Issue: X1	Revision Date: 08/11/2017	Page: 3/10
-----	-----------	---------------------------	------------

- | | |
|------------------------|--|
| 6.2 Resonant frequency | 200±10 Hz
220-180hz sweep down(Refer to standard test condition) |
| 6.3 Rise time | 100ms Max (from 0 to 90% nominal acceleration) (Refer to standard test condition) |
| 6.4 Fall time | 120ms Max (free fall from 100% to 10% nominal acceleration) (Refer to standard test condition) |
| 6.5 Noise | ≤45 dBA @ 10 cm @ 100g test jig @ F0 @ 2Vrms, DRV2604 (10cm distance from microphone) |

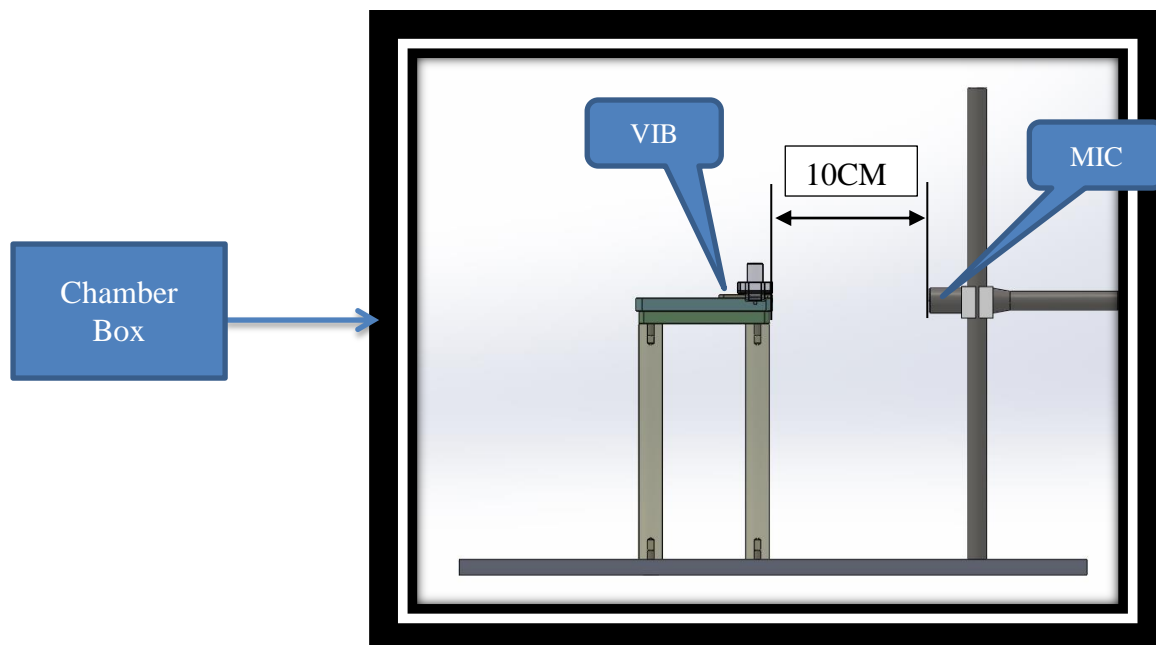

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 4/10

7. Standard Test Condition

7.1 Climatic condition

The measurement at $25^{\circ}\text{C} \pm 3^{\circ}\text{C}$ & $65\%\text{RH} \pm 20\%\text{RH}$ is standard. If the judgment is not questionable, recognize measurement at 5°C to 35°C & relative humidity $45\%\text{RH}$ to $85\%\text{RH}$.

7.2 Input Frequency sine wave/F0
(input F0 from frequency response curve)

7.3 Input voltage 2Vrms

7.4 Suspending method


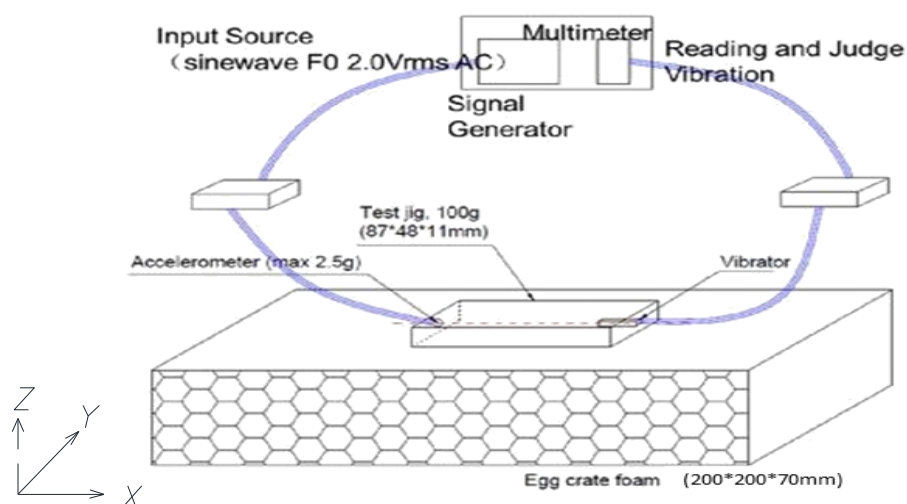


Fig 2. test method

1. Placed a 100g test jig in the center of the soft foam, 87*48 mm plane must be located on foam.

2. Attached the vibrator and accelerometer to the x axis face of the block, both vibrate and measure direction should be mounted to x axis.

3. Position of vibrator and sensor in test jig: The sensor is on the left wall of the testing jig, also is at the center axis. The location of the motor in test jig should be at the same axis with sensor, and the distance between motor center and sensor is 74mm.

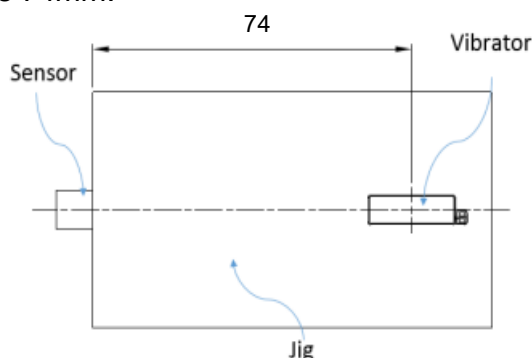

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 5/10

7.5 Drawing of test jig

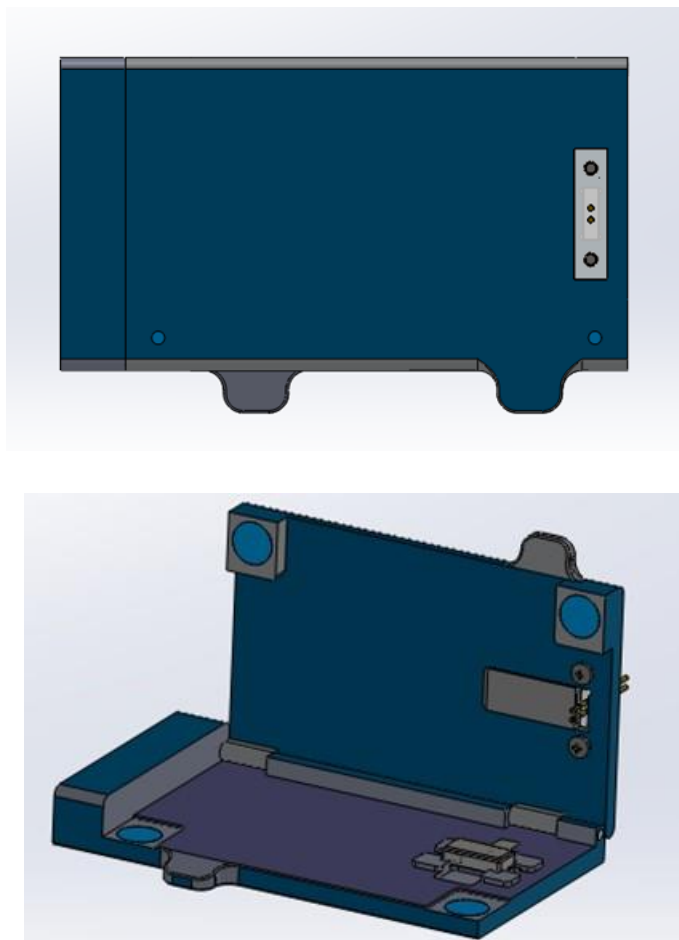


Fig 3. test jig

Caution:

Be sure the attached both accelerometer and vibrator tightly to get precise test result. Or may get wrong acceleration data or noise.

7.6 Measure method

7.6.1 Reading the vibration for 0.5~2.0S.

7.6.2 For more precision measurement, average of 3 times measure data is required.

Keywords: Linear Vibrator, 150Hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO.	Issue: X1	Revision Date: 08/11/2017	Page: 6/10
-----	-----------	---------------------------	------------

8. Recommended Stimulus

Auto resonance driver is strongly recommended. Vibration can be adjusted by changing voltage.

9. Reliability Tests

Immediately after reliability test, the samples shall be stored under climatic conditions such as normally exist in ordinary rooms or laboratories. Unless otherwise noted, the recovery period shall be 4 hours at least before performance testing.

After reliability test, all samples must be meet the requirements as follow:

- 1 Resonant frequency: within $\pm 5\%$ of original
- 2 Noise: Max 55dBA
- 3 Acceleration: Min 0.50Grms
- 4 Rise time: Max 150ms
- 5 Fall time: Max 170ms

9.1 Free Fall Test: 10 samples


The samples should be mounted in a 150 gram fixture, drop to the granite floor, 1.5 meters 18 times, 1 time every face and 1 time every edge;

9.2 Life Test: 20 samples

sample should be operated on standard condition(100g jig on foam @ 2Vrms sinewave F0) ON(2s)/OFF(1S) for 120hours

9.3 Temperature shock: 10 samples

-40°C/+85°C in each of 60min, total 10 cycles. 7 min transition time;

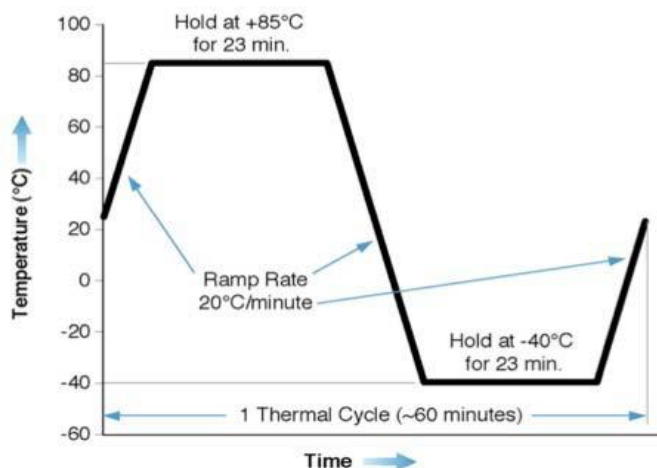

9.4 High temperature storage: 10 samples

+85°C, 168 hours

9.5 Low temperature storage: 10 samples

-40°C, 168 hours

9.6 Salt Mist Test: 10 samples

+35°C, 5%Nacl, 24 hours

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 7/10

10. Caution for use

10.1 Do not press vibrator with force more than 12N. It may lead to transformation of appearance or performance.

10.2 Do not use vibrator in follow environment. It may cause decline of performance or damage to vibrator.

10.2.1 Do not keep vibrator at high humidity or high temperature for extended too long time.

10.2.2 Do not use vibrator near magnetic device or magnetizer.

10.2.3 Do not use vibrator near erosion gas.

10.2.4 Do not drop vibrator into liquid.

10.3 There is strong magnetic on the surface of vibrator. Do not set components sensitive to magnetic within 3 mm in Z-direction of vibrator surface.

10.4 To use vibrator reliable, vibrator should be fixed to house firmly in vibrate direction. Or it may be cause bad noise.

10.5 Soft material (such as poron or foam etc.) is not adequate to fix vibrator in vibration direction. it can only be used as a auxiliary to reinforce reliability. Or it may be cause lower vibration.

Keywords: Linear Vibrator, 150hms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 8/10

11. Mechanical Drawing:

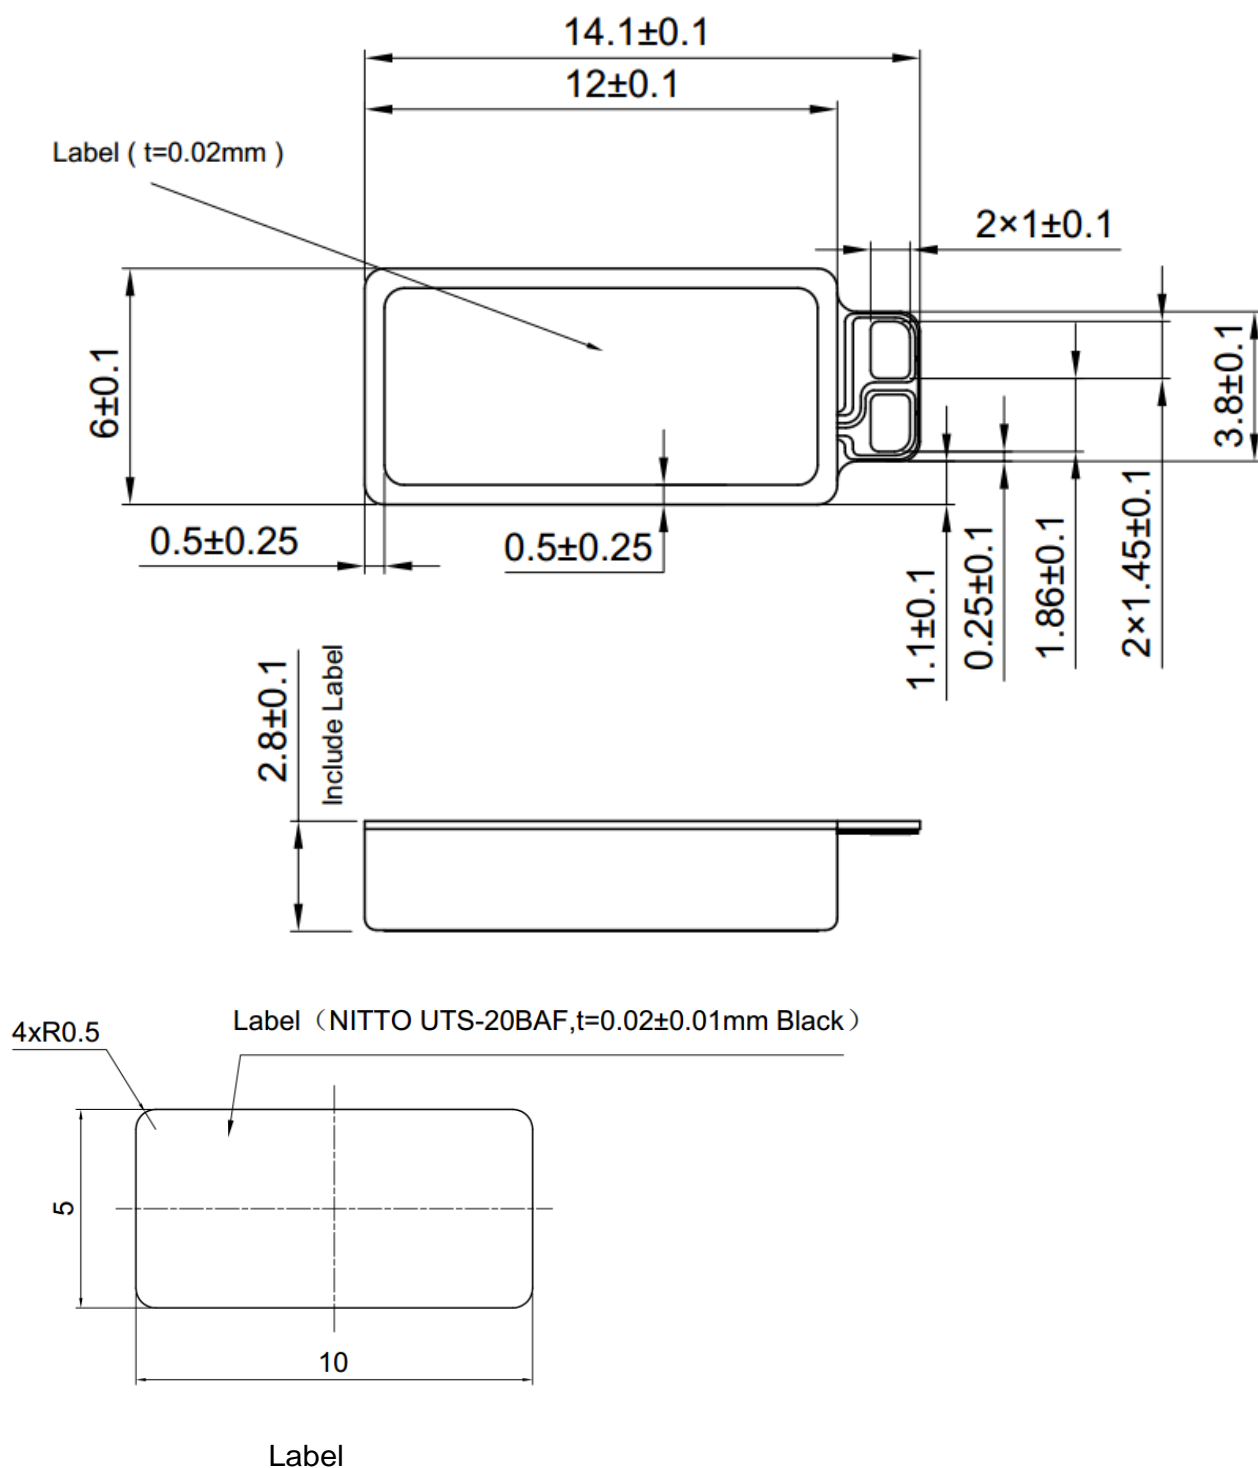
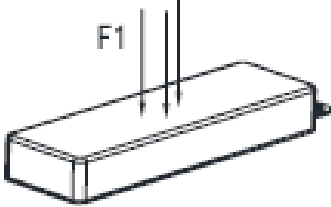
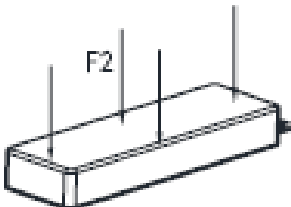
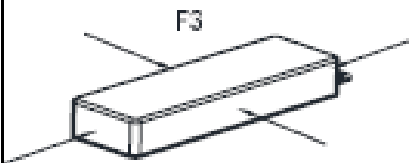
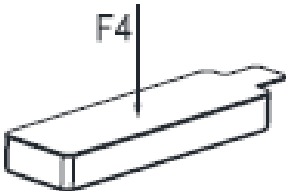
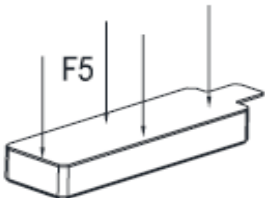



Fig 4. mechanical layout

Keywords: Linear Vibrator, 150ohms, 6x12x2.8mm, Connector Contact, GP Compliant

NO. Issue: X1 Revision Date: 08/11/2017 Page: 9/10

12. Permitted force to vibrator

No.	Meaning of the force	Magnitude(N)
1		Max.12
2		Max.12
3		Max.5
4		Max.12
5		Max.12
6		Max.15N